

Ring Volume

This feature allows the user to select the ring volume to be used by the phone.



This feature is available to Nortel phones only.

To select the Ring Volume

Phone Type	Steps	Notes
Nortel phone with Feature key	<ol style="list-style-type: none">1. Press the Feature key followed by the feature code *80.2. Use the Up and/or Down soft keys or digits 0 to 7 to select the desired ring volume.3. Press the Enter key.	
Nortel phone with Services key	<ol style="list-style-type: none">1. When idle, press the Services key and use the navigation keys to scroll down to Ring Volume.2. Invoke the feature.3. Use the Up and/or Down soft keys or digits 0 to 7 to select the desired ring volume.4. Press the Enter key.	
