

## Ring Volume

This feature allows the user to select the ring volume to be used by the phone.



This feature is available to Nortel phones only.

### To select the Ring Volume

Phone Type	Steps	Notes
<b>Nortel phone with Feature key</b>	<ol style="list-style-type: none"><li>1. Press the <b>Feature</b> key followed by the feature code <b>*80</b>.</li><li>2. Use the <b>Up</b> and/or <b>Down</b> soft keys or digits <b>0</b> to <b>7</b> to select the desired ring volume.</li><li>3. Press the <b>Enter</b> key.</li></ol>	
<b>Nortel phone with Services key</b>	<ol style="list-style-type: none"><li>1. When idle, press the <b>Services</b> key and use the navigation keys to scroll down to <b>Ring Volume</b>.</li><li>2. <b>Invoke</b> the feature.</li><li>3. Use the <b>Up</b> and/or <b>Down</b> soft keys or digits <b>0</b> to <b>7</b> to select the desired ring volume.</li><li>4. Press the <b>Enter</b> key.</li></ol>	

---